



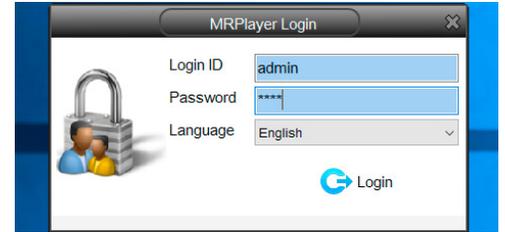

MRPlayer software is located on included DVD. Insert DVD into your computer and follow on-screen instructions to install for video playback.

Once software is loaded, a Setup window will open. Select second option to install the player.

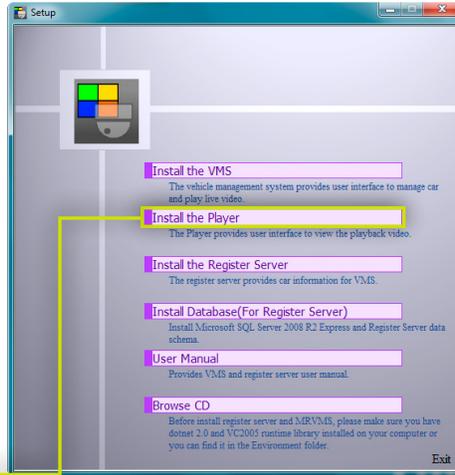


Pull the SD card from the DVR and insert it into your computer and the MRPlayer Login window will appear. To log into the software for the first time, please use:

Login ID: admin  
Password: 1111

(Both Login ID and Password can be customized in Settings after initial login.)

**CAMERA VIEWS SELECTION:**  
Choice of 1 or 4 camera views.

**CAMERA CHANNEL SELECTION:** Cycles through the camera views if you are in 1 camera mode.

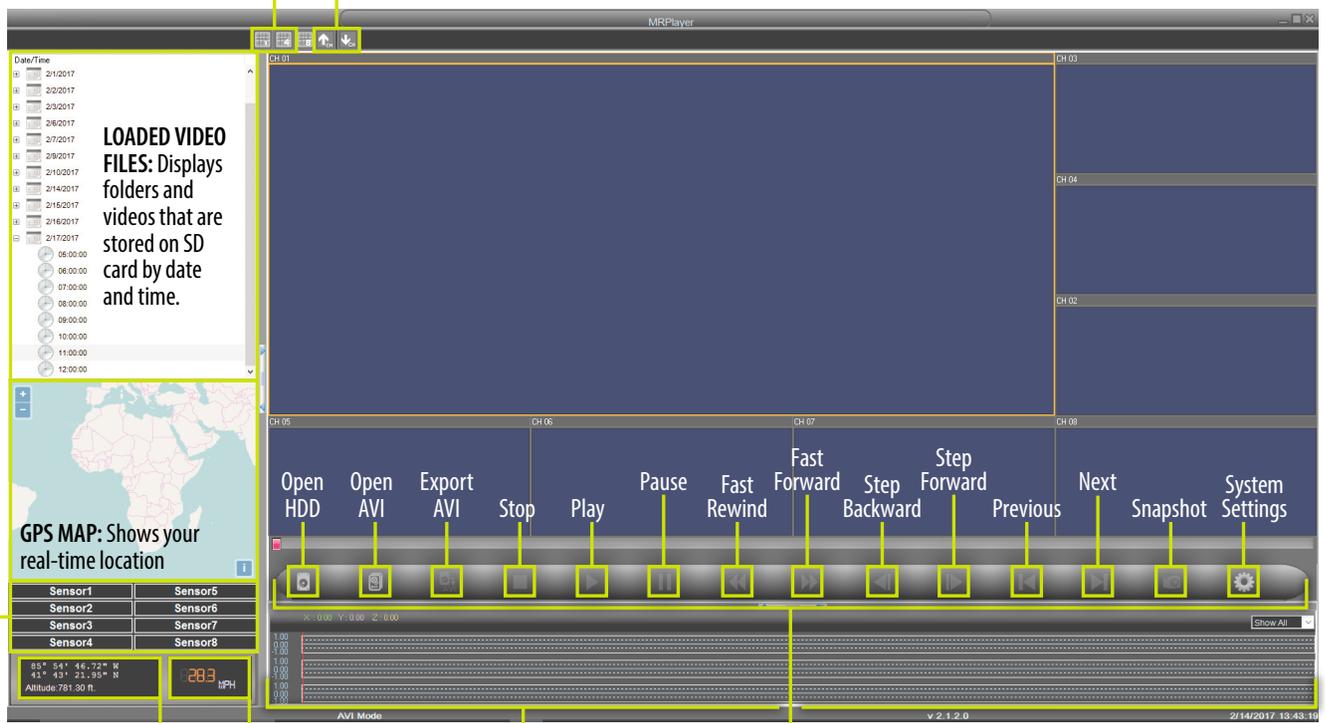

**LOADED VIDEO FILES:** Displays folders and videos that are stored on SD card by date and time.

**GPS MAP:** Shows your real-time location

Sensor1	Sensor5
Sensor2	Sensor6
Sensor3	Sensor7
Sensor4	Sensor8

Altitude 781.30 ft


283 MPH

**TRIGGER SENSORS:** GPS INFO VEHICLE SPEED  
Shows if and what turn signals were used.

**SHOCK SENSORS**

**PLAYBACK CONTROL BAR**

**OPEN AVI:** Once logged in and with an SD card loaded, the Open AVI icon will be accessible. Tap to start browsing for video files.

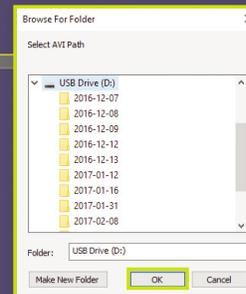



**BROWSE:** Within the video file browsing window, select the folder with the date that you want to view and click OK.



SHOCK SENSOR READINGS

PLAYBACK BAR

**EXPORTING VIDEOS:** Tap the System Settings icon at the far right of the playback control bar to open the System Settings window. Select the individual export features you want attributed to the video being exported. Tap the yellow browsing folder to open a browsing window.

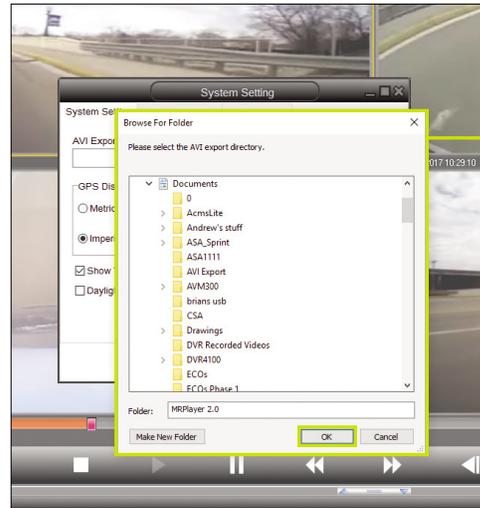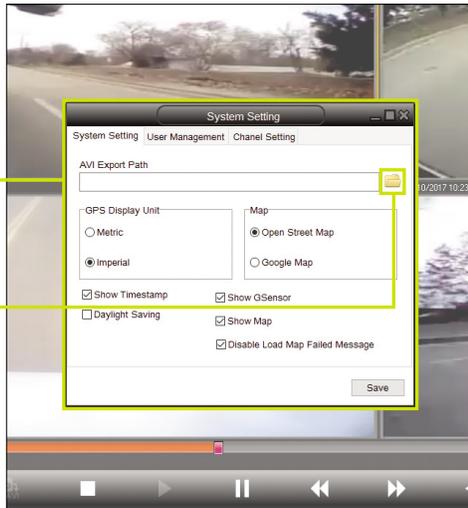

Choose the destination location for your video file within the browsing window. Click OK to export.

For the complete owner's manual, please visit <http://www.asaelectronics.com/manuals-guides>.